C1-220 Wall Control

SPECIFICATION and INSTRUCTION SHEET

DESCRIPTION: One Fan (no light) Only, 4 Speed-Rotary Control

ELECTRICAL SPECS: 220-240V, 50 Hz, Max.100W-Min.15W (Fan motor)

2 Wire Installation

FAN MODELS USED: most 220-240V Fanimation fans



How to Wire and Operate Your C1-220 Wall Control

NOTE: If fan or supply wires are different colors than indicated, have this unit installed by a qualified electrician.

- 1. Installing Wall Control (Figures 1 & 2):
- With electrical power still disconnected, remove the existing wall plate and switch.
- Make wiring connections to terminal block as shown in Figure 1.
 - One brown wire from wall control unit to red/brown (hot supply).
 - One brown wire from wall control unit to brown wire leading to ceiling outlet box.
- Attach wall control unit to outlet box using the two 6-32 screws provided.
- Attach wall plate to the switch control front.
- · Restore electrical power.

220-240 VAC SUPPLY (User Supplied) Wall Control (Rear View) BRN TO FIAN TO HAN TO

A WARNING

To avoid possible fire or shock, make sure that the electrical wires are completely inside the outlet box and not pinched between the wall plate and the wall.

▲ WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades are in place. Noise and fan damage could result.

2. Operating & Using Wall Control:

NOTE: Set pull chain to high speed before using the wall control. You can now use your speed control to select any of the 4-speeds plus OFF.

- 4th Position low fan speed
- 3rd Position low medium fan speed
- 2nd Position medium fan speed
- 1st Position high fan speed
- OFF Position fan off



