

# C27 Wall Control

## SPECIFICATION and INSTRUCTION SHEET

**DESCRIPTION:** One Ceiling Fan & Light, 4 Speed-Slide Control

**ELECTRICAL SPECS:** 120 Volts, 60 Hertz, Fan 1.25 amps, Light Rating 300W Incandescent, 3 Wire Installation

**FAN MODELS USED:** most Fanimation fans - see Catalog or visit our website, [www.fanimation.com](http://www.fanimation.com) for more information




## How to Wire and Operate Your C27 Wall Control

**NOTE:** If fan or supply wires are different colors than indicated, have this unit installed by a qualified electrician.

### 1. Installing Wall Control (Figures 1 & 2):

- With electrical power still disconnected, remove the existing wall plate and switch.
- Make wiring connections with wire nuts as shown in Figure 1.
  - One black/white wire from wall control unit to black (hot supply).
  - One blue wire from wall control unit to blue (light).
  - One black wire from wall control unit to black wire leading to ceiling outlet box.
- Attach wall control unit to outlet box using the two 6-32 screws provided.
- Attach wall plate to the switch control front using the two small screws provided.
- Restore electrical power.

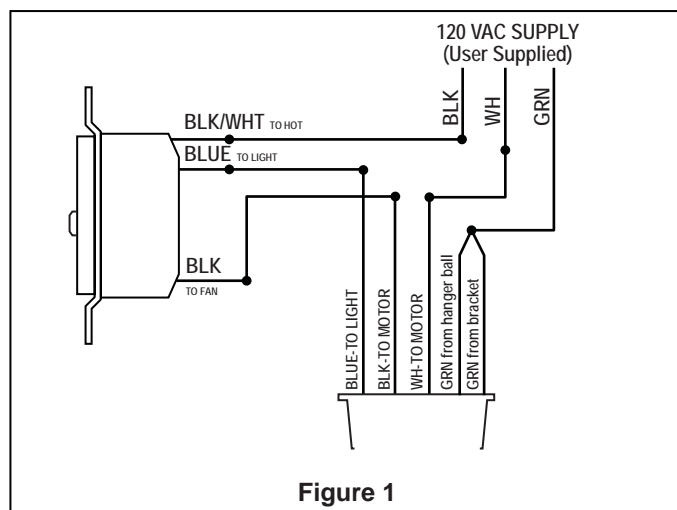

### ⚠ WARNING

To avoid possible fire or shock, make sure that the electrical wires are completely inside the outlet box and not pinched between the wall plate and the wall.

### ⚠ WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades is in place. Noise and fan damage could result.

### 2. Operating & Using Wall Control:


**NOTE:** If airflow is desired in the opposite direction, turn the fan off and wait for the blades to stop turning. Then slide the reverse switch to the opposite position and turn fan on again. The reversing switch is located on top of the fan motor assembly.

#### Fan Switch

- 4 Slide Switch – low fan speed
- 3 Slide Switch – low-medium fan speed
- 2 Slide Switch – medium fan speed
- 1 Slide Switch – high fan speed
- \_ Switch – fan off

#### Light Switch

- Dimmer Slide Switch – low to bright light
- \_ Switch – light off

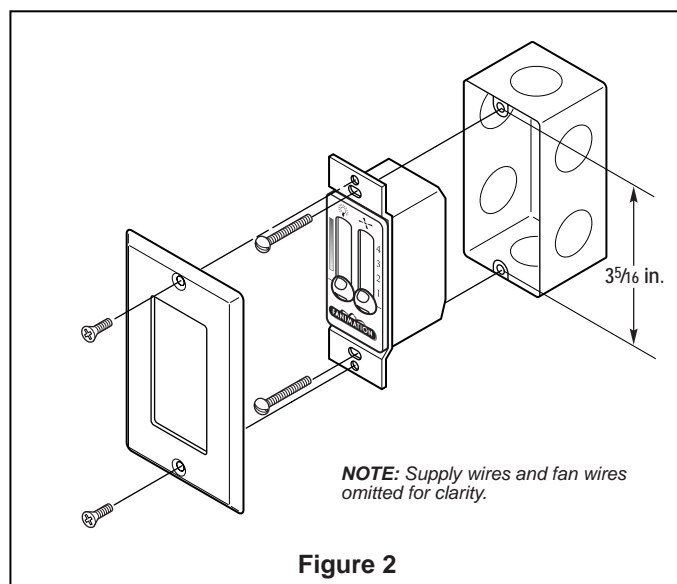

10983 Bennett Parkway  
Zionsville, IN 46077  
(888) 567-2055 • FAX (866) 482-5215  
Outside U.S. call (317) 733-4113  
Visit Our Website @ [www.fanimation.com](http://www.fanimation.com)

Copyright 2005 Fanimation  
2005/08