

C3 Wall Control

SPECIFICATION and INSTRUCTION SHEET

DESCRIPTION: One Fan (no light) Only, 2 Speed-Slide Control

ELECTRICAL SPECS: 120 Volts, 60 Hertz, Fan 1.25 amps, 2 Wire Installation

FAN MODELS USED: • The Brewmaster • The Palisade



How to Wire and Operate Your C3 Wall Control

NOTE: If fan or supply wires are different colors than indicated, have this unit installed by a qualified electrician.

1. Installing Wall Control (Figures 1 & 2):

- With electrical power still disconnected, remove the existing wall plate and switch.
- Make wiring connections with wire nuts as shown in Figure 1.
 - One black wire from wall control unit to black (hot supply).
 - One black wire from wall control unit to black wire leading to ceiling outlet box.
- Attach wall control unit to outlet box using the two 6-32 screws provided.
- Attach wall plate to the switch control front using the two small screws provided.
- Restore electrical power.

⚠ WARNING

To avoid possible fire or shock, make sure that the electrical wires are completely inside the outlet box and not pinched between the wall plate and the wall.

⚠ WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades are in place. Noise and fan damage could result.

2. Operating & Using Wall Control:

Check the operation of the fan by moving the slide switch on the wall control to low and then to high.

- OFF Switch – fan off
- HI Switch – high fan speed
- LO Switch – low fan speed
- OFF Switch – fan off

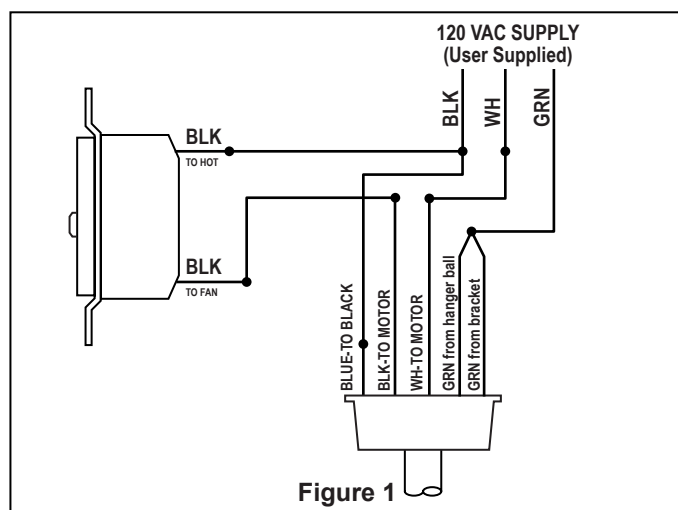


Figure 1

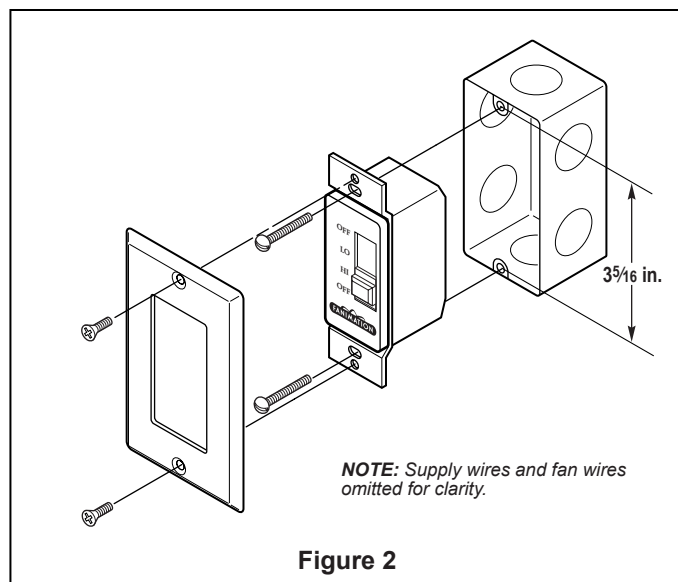


Figure 2



10983 Bennett Parkway
Zionsville, IN 46077
(888) 567-2055 • FAX (866) 482-5215
Outside U.S. call (317) 733-4113
Visit Our Website @ www.fanimation.com

Copyright 2004 Fanimation
2004/08