C6 Wall Control

DESCRIPTION: One Ceiling Fan & Light, 3 Speed-Slide Control

ELECTRICAL SPECS: 120 Volts, 60 Hertz, 1.25 amps, Rated 500W Incandescent,

3 Wire Installation

FAN MODELS USED: • The Brewmaster • The Palisade




How to Wire and Operate Your C6 Wall Control

NOTE: If fan or supply wires are different colors than indicated, have this unit installed by a qualified electrician.

- 1. Installing Wall Control (Figures 1 & 2):
- · With electrical power still disconnected, remove the existing wall plate and switch.
- · Make wiring connections with wire nuts as shown in Figure 1.
 - One black/white wire from wall control unit to black (hot supply).
 - One blue wire from wall control unit to blue (light).
 - One black wire from wall control unit to black wire leading to ceiling outlet box.
- Attach wall control unit to outlet box using the two 6-32 screws provided.
- Attach wall plate to the switch control front using the two small screws provided.
- Restore electrical power.

120 VAC SUPPLY (User Supplied) 몺 **BLK/WHT** TO HOT BLUE TO LIGHT BLK BLUE-TO LIGHT BLK-TO MOTOR WH-TO MOTOR **GRN** from fan Figure 1

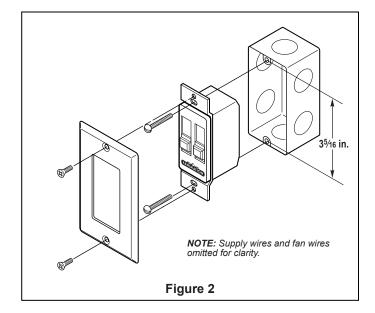

WARNING

To avoid possible fire or shock, make sure that the electrical wires are completely inside the outlet box and not pinched between the wall plate and the wall.

WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades is in place. Noise and fan damage could result.

2. Operating & Using Wall Control:

NOTE: Set pull chain to high speed before using the wall control. You can now use your speed control to select any of the 3-speeds plus OFF.

- 3 Slide Switch low light
- Switch fan off
- 2 Slide Switch medium light L Slide Switch low fan speed
- 1 Slide Switch bright light
 H Slide Switch high fan speed
- Switch light off
- · Switch fan off

