

# C8 Remote Control

## SPECIFICATION and INSTRUCTION SHEET

**DESCRIPTION:** One Ceiling Fan & Light, 3 Speed Remote Control

**ELECTRICAL SPECS:** 120 Volts, 60 Hertz, Fan 1.0 amp, Light Rating 300W  
Halogen, 6 Wire Installation

**FAN MODEL USED:** • The Escalade (*formally Echelon*) (with the Optional Light Kit - LK23)



## How to Wire and Operate Your C8 Remote Control

**NOTE:** If fan or supply wires are different colors than indicated, have this unit installed by a qualified electrician.

### ⚠ WARNING

To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring.

**NOTE:** If you are not sure if the outlet box is grounded, contact a licensed electrician for advice, as it must be grounded for safe operation.

**1. Setting the Code:** The remote unit has 16 different code combinations. It may be necessary to test a couple frequency code settings to improve signal reception and/or eliminate interference from other remote control household items. Multiple fans should have different code settings to allow independent fan control. To set the code, perform these steps.

- **Transmitter:** remove battery cover. Press firmly below arrow and slide battery cover off. Slide code switches to your choice of up or down position. Factory setting is all up. Do not use this position. With a small screwdriver or ball point pen slide firmly up or down (Figure 2a). Replace battery cover on the transmitter.

- **Receiver:** Slide code switches to the same positions as set on your transmitter (Figure 2b).

### **2. Installing Receiver in Hanger Bracket:**

- Slide remote Receiver into the Hanger Bracket (Figure 2).
- Connect wires as indicated: (Figure 3)
  - Green Hanger Bracket and Hanger Ball wires to BARE (ground) wire.
  - BLACK Receiver Unit wire (AC IN L) to BLACK supply wire.
  - WHITE Receiver Unit wire (AC IN N) to WHITE supply wire.
  - WHITE Receiver Unit wire (TO MOTOR N) to WHITE fan wire.
  - BLACK Receiver Unit wire (TO MOTOR L) to BLACK fan wire.
  - BLUE Receiver Unit wire (FOR LIGHT DOWN) to BLUE light wire.
  - ORANGE Receiver Unit wire (FOR LIGHT UP) to ORANGE light wire.




- Position all connected wires and receiver antenna to allow installation of ceiling canopy.

- Install canopy using threaded rods, lockwashers, and knurled knobs.

- Restore electrical power.

### ⚠ WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades is in place. Noise and fan damage could result.

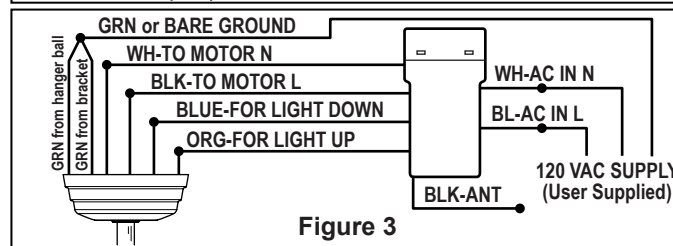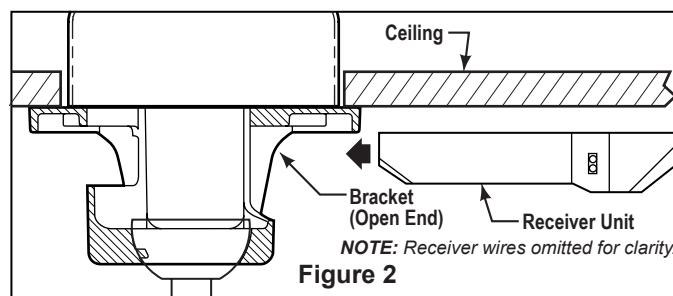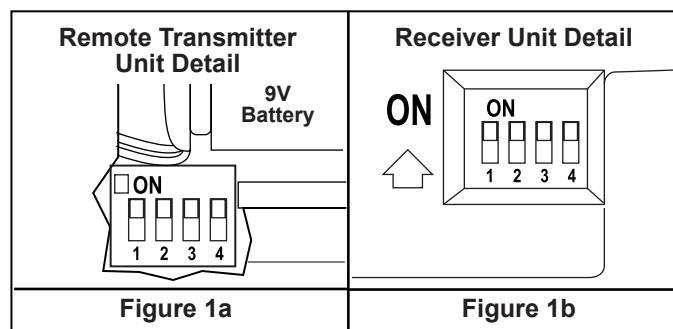

### **3. Operating & Using Remote Transmitter:**

Install 9 volt battery (If not using for long periods of time, remove battery to prevent damage to transmitter). Store the transmitter away from excess heat or humidity.

- HI Push Button – high fan speed
- MED Push Button – medium fan speed
- LOW Push Button – low fan speed
- OFF Push Button – fan off
- U/L Push Button – on/off and brightness control for optional up light
- D/L Push Button – on/off and brightness control for optional down light

**NOTE:** To control either light hold down key to increase or decrease brightness. Tap key quickly to turn light on or off. The light keys have auto resume and will stay at the same brightness as the last time it was turned off.



10983 Bennett Parkway  
Zionsville, IN 46077  
(888) 567-2055 • FAX (866) 482-5215  
Outside U.S. call (317) 733-4113  
Visit Our Website @ [www.fanimation.com](http://www.fanimation.com)

Copyright 2004 Fanimation  
2004/08