


Lay out the down rods and coupler as shown to the right. Each threaded hole in the coupler will line up with the holes on each downrod.

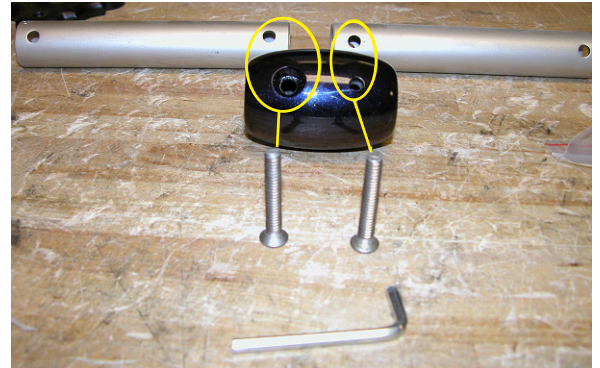

Insert the down rods into to each side of the coupler. Insert the screw into the larger tapered hole and run it through the downrod until you are able to securely tighten the screw into the threaded side of the coupler. Turn the coupler over and repeat on the other end.



When the screws are securely fastened, the downrods should be sturdy and there should be no movement.



After installation of the downrod coupler is complete, assemble on your ceiling fan according to the owner's manual instructions supplied with the fan.

